


**Make: FORD**

**Model: Transit 2000-->**

**Part Number: ADB31108**

**Vehicle Manufacturing/Engine:**

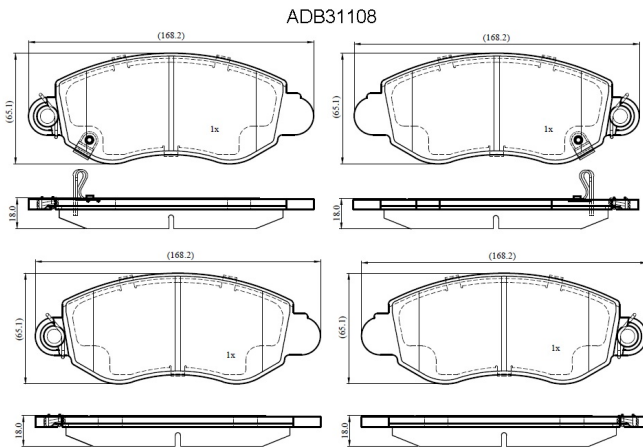

### Specifications

<b>Fitting Position</b>	:	Front
<b>Model Date</b>	:	04/00-->
<b>Or. Caliper</b>	:	Bosch
<b>WVA</b>	:	23577

<b>FMSI</b>	:	
<b>Length</b>	:	168.2
<b>Width</b>	:	65.1
<b>Thickness</b>	:	18